



Ronald  
McDonald  
Family  
Room®

## Washing Machine Helpful Tidbits:

### Washer A

- To start a cycle, you must hold the 'Start' button for 3 full seconds.
  - It will count down 3, 2, 1 on the screen, and then it will start.
- Since this is a 'smart washer', it will sense how full the drum is after you start it to determine how long the cycle will be. Therefore, it takes about 5 full seconds for it to 'think' and then it will begin the cycle.
- The touch screen is very sensitive and if touched during a cycle, it may cause the wash to completely stop.
  - To avoid this from happening, you can press the 'Extra Rinse' button to "Hold 3 sec for Control Lock" once your cycle begins.
  - At the end of the cycle, you will have to turn off the lock by pressing the 'Extra Rinse' button to "Hold 3 sec for Control Lock" again.

### Dryer B

- The touch screen is very sensitive and if it is touched during a cycle, it may cause the cycle to completely stop.
  - To avoid this from happening, you can press the 'Control Lock' button "Hold 3 sec" once your cycle begins.
  - At the end of the cycle, you will have to turn off the lock by pressing the 'Control Lock' button "Hold 3 sec" again.
- It is suggested to select the "Timed Dry" option and set your time (typically 50 minutes) to ensure your clothes are dry. This is a smart dryer and unfortunately shuts off mid-cycle otherwise, acting not-so-smart.

### Washer C

- You **must use a cold-water setting** for this washing machine to work.
- This washer is **not connected to hot or warm water** at this time. Do not use hot or warm water.